




SMART AUTOMATIC 12/24 VOLT

SOLAR CHARGE CONTROLLER

4 STAGE CHARGING

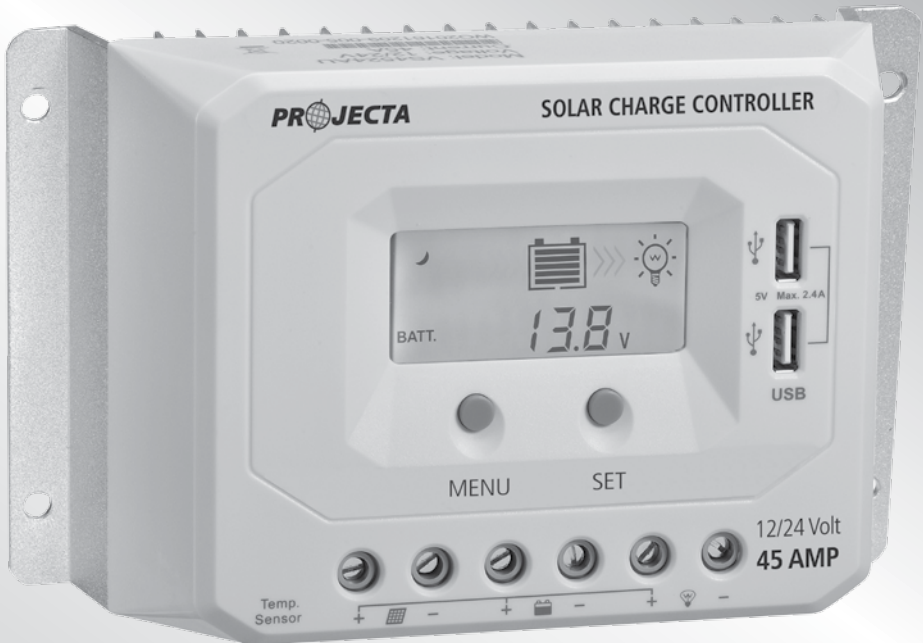

P/No. SC220, SC245, SC260

IMPORTANT SAFETY INFORMATION

Please read this instruction thoroughly before installing the product.


WARNINGS

- This charger is designed for indoor use only
- Do not disassemble the controller. Take to a qualified person if the unit requires repairing
- Lead acid batteries can be dangerous. Ensure no sparks or flames are present when working near batteries
- Eye protection should always be used. Never short circuit the battery
- Given sufficient light solar panels always generate energy even when they are disconnected
- Accidental 'shorting' of the terminals or wiring can result in sparks causing personal injury or a fire hazard. We recommend that you cover up the panel(s) with some sort of soft cloth so you can block all incoming light during the installation. This will ensure that no damage is caused to the Solar Panel or Battery if the wires are accidentally short circuited
- Always install a battery fuse on each circuit including the solar controller
- Do not reverse connect the wires to the solar panel or battery

MOUNTING THE DEVICE


The Solar Controller is mounted as below.

The quickest and easiest way to mount the unit is to use self tapping screws and mount the unit via the four screw holes located on the mounting wings, affix to a flat surface.

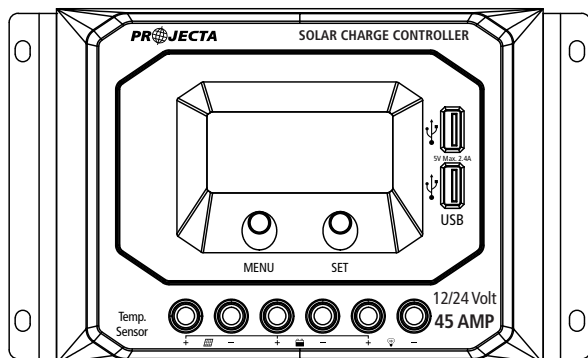


FEATURES

- 4 Stage charging ensures the battery is charged to the optimum level (Bulk, Absorption, Equalisation and Float)
- Advanced MCU control pulse width modulated (PWM) technology, high efficiency operation
- Programmable for Gel, AGM and Conventional lead-acid (WET) Batteries
- Built in regulator to prevent your battery from being overcharged. Overcharging occurs when the charge voltage is unregulated. This can result in premature battery failure
- In built regulator prevents your battery from being under charged, in the solar energy field, battery undercharge often occurs, especially on some conventional Lead Acid batteries; the unit provides an automatic equalization feature for deeply drained conventional Lead Acid and AGM batteries, as well as provides a cycling automatic equalizing feature every 28 days
- The Smart Controllers can be connected to the battery permanently to keep the battery fully charged by using a process called "floating". This means the controller will stop charging when the battery is full and will automatically start charging the battery as required. This process will also reduce water loss and help prevent the battery from 'drying out'
- Protects your battery from discharge at night. Under low light or no light conditions the solar panel voltage could be less than the battery voltage. The unit contains a special circuit which prevents current flowing back from the battery and into the solar panel
 - LCD display design, dynamically displays device's operating data and working condition
 - Dual USB ports (5VDC/2.4A combined Max output) allow power supply charge for electronic equipment
- Built-in external battery temperature sensor. Optional sensor probe also available (P/No. SC3TMP)
- Multi charging protections against reverse polarity, short circuit, over temperature, over voltage, etc.
- IP Rating: IP30

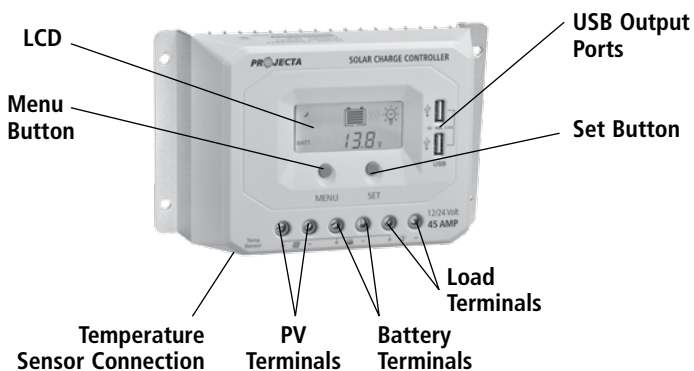

WIRING CONNECTIONS

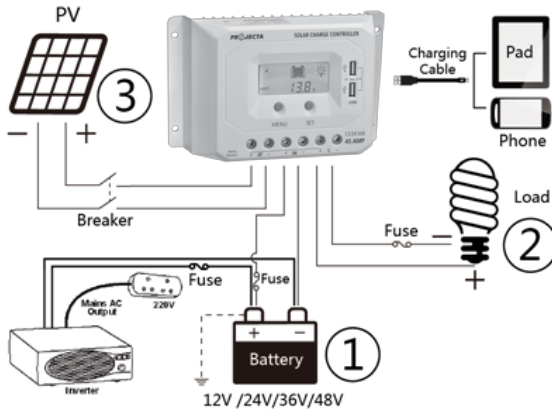

1. Connect components to the charge controller in the sequence as shown above and pay particular attention to the "+" and "-".

Please don't insert the fuse or turn on the breaker during the installation.

When disconnecting the system, the order will be reversed.

2. Power on the controller, check the LCD screen turns on. If the screen does not power up, refer to page 9 TROUBLESHOOTING.

Always connect the battery first, in order to allow the controller to recognize the system voltage.

3. The battery fuse should be installed as close to battery as possible. The suggested distance is within 150mm.

4. The Smart Controller Range is a positive ground controller. Any positive connection of solar, load or battery can be earth grounded as required.

NOTE: Please connect the inverter or other load that it has the large start current to the battery rather than to the controller, if the inverter or other load is necessary.

OPERATION

Button Function

| Button | Function |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| MENU Button | <ul style="list-style-type: none"> • Browse interface • Setting parameter |
| SET Button | <ul style="list-style-type: none"> • Load ON/OFF • Clear error • Enter into Set Mode • Save data |


LCD Display



Status Display

| Item | Icon | Status |
|----------|-------------------|---------------------------------------|
| PV Array | | Day |
| | | Night |
| | | No Charging |
| | | Charging |
| | PV | PV Voltage, Current, Power |
| Battery | | Battery capacity, in charging |
| | BATT. | Battery voltage, current, temperature |
| | BATT. TYPE | Battery type |
| Load | | Load ON |
| | | Load OFF |
| | LOAD | Load voltage, current, load mode |

BROWSE INTERFACE

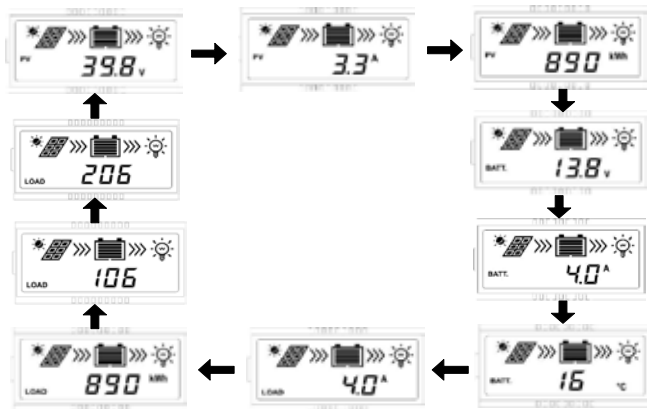









NOTE

1. When no operation, the interface will automatically cycle, but the following two interfaces will not display.



2. Accumulative power zero clearing: Under PV power interface, press SET button and hold on 5s then the value blink, press SET button again to clear the value.
3. Setting temperature unit: Under battery temperature interface, press SET button and hold on 5s to switch to Fahrenheit or Celsius.

FAULT INDICATION

| Status | Icon | Description |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| Battery over discharge |   | Battery level shows empty, battery frame blink, fault icon blink |
| Battery over voltage |   | Battery level shows full, battery frame blink, fault icon blink |
| Battery overheating |   | Battery levels show current value, battery frame blink, fault icon blink |
| Load failure |   | Load overload ¹ , load short circuit |

1. When load current reaches 1.02–1.05 times, 1.05–1.25 times, 1.25–1.35 times and 1.35–1.5 times more than nominal value, controller will automatically turn off loads in 50s, 30s, 10s and 2s respectively

LOAD MODE SETTING

Operating Steps

Under load mode setting interface, press SET button and hold on for 5 seconds until the number begins flashing, then press MENU button to set the parameter, press SET button to confirm.

| 1** | Timer 1 | 2** | Timer 2 |
|---------|---------------------------------------------|---------|-----------------------------------------------|
| 100 | Light ON/OFF | 2 n | Diabled |
| 101 | Load will be on for 1 hour since sunset | 201 | Load will be on for 1 hour before sunrise |
| 102 | Load will be on for 2 hours since sunset | 202 | Load will be on for 2 hours before sunrise |
| 103–113 | Load will be on for 3–13 hours since sunset | 202–213 | Load will be on for 3–13 hours before sunrise |
| 114 | Load will be on for 14 hours since sunset | 214 | Load will be on for 14 hours before sunrise |
| 115 | Load will be on for 15 hours since sunset | 215 | Load will be on for 15 hours before sunrise |
| 116 | Test mode | 2 n | Diabled |
| 117 | Manual mode (Default load ON) | 2 n | Diabled |

NOTE: Please set Light ON/OFF, Test mode and Manual mode via Timer 1. Timer 2 will be disabled and display “2 n”.

BATTERY TYPE

Operating Steps

Under Battery Voltage interface, press SET button and hold on 5s then enter into the interface of Battery type setting. After choosing the battery type by pressing MENU button, waiting for 5s or pressing SET button again to modify successfully.

Battery Type



1. Sealed (AGM)
(default)

2. GEL









3. FLOODED

NOTE: Please refer to the battery voltage parameters table for the different battery type.

PROTECTION

| Protection | Conditions | Status |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| PV Reverse Polarity | When the battery is correct connecting, the PV can be reversed. | The controller is not damaged |
| Battery Reverse Polarity | When the PV is not connecting, the battery can be reversed. | Stop charging |
| Battery Over Voltage | The battery voltage reaches to the OVD | Stop discharging |
| Battery Over Discharge | The battery voltage reaches to the LVD | |
| Battery Overheating | Temperature sensor is higher than 65° Temperature sensor is less than 55° | Output is OFF Output is ON |
| Controller Overheating | Temperature sensor is higher than 85° Temperature sensor is less than 75° | Output is OFF Output is ON |
| Load Short Circuit | Load current ≥ 2.5 times rated current One short circuit, the output is OFF 5s; Two short circuit, the output is OFF 10s; Three short circuit, the output is OFF 15s; Four short circuit, the output is OFF 20s; Five short circuit, the output is OFF 25s; Six short circuit, the output is OFF | Output is OFF Clear the fault: Restart the controller or wait for one night-day cycle (night time > 3 hours) |
| Load Overload | Load current ≥ 2.5 times rated current 1.02-1.05 times, 50s, 1.05-1.25 times, 30s 1.25-1.35 times, 10s 1.35-1.5 times 2s | Output is OFF Clear the fault: Restart the controller or wait for one night-day cycle (night time > 3 hours) |
| Damaged RTS (Temp. Sensor) | The RTS is short-circuited or damaged | Charging or discharging at 25° |

TROUBLESHOOTING

| Faults | Possible reasons | Troubleshooting |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The LCD is off during daytime when sunshine falls on PV modules properly | PV array disconnection | Confirm that PV wire connections are correct and tight |
| Wire connection is correct, LCD not display | 1) Battery voltage is lower than 9V 2) PV voltage is less than battery voltage | 1) Please check the voltage of battery. At least 9V voltage to activate the controller 2) Check the PV input voltage which should be higher than battery's |
|   Interface blink | Battery over voltage | Check if the battery voltage is higher than OVD point (over voltage disconnect voltage), and disconnect the PV |
|   Interface blink | Battery over discharged | When the battery voltage is restored to or above LVR point (low voltage reconnect voltage), the load will recover |
|   Interface blink | Battery Overheating | The controller will automatically turn the system off. But while the temperature decline to be below 50°C, the controller will resume |
|   Interface blink | Over load or Short circuit | Please reduce the number of electric equipment or check carefully load connection |

SPECIFICATIONS

| Item | SC220 | SC245 | SC260 |
|--------------------------------------|---------------------------------------------------------------|-------------------------|-------------------------|
| Nominal system voltage | 12/24VDC | 12/24VDC | 12/24VDC |
| Battery input voltage range | 9V–32V | 9V–32V | 9V–32V |
| Rated charge/discharge current | 20A@55°C | 45A@55°C | 60A@55°C |
| Max. PV open circuit voltage | 50V | 50V | 50V |
| Battery type | Sealed(Default)/Gel/Flooded | | |
| Bulk/Absorption Charging Voltage | Sealed:14.4V/ Gel:14.2V/ Flooded 14.6V | | |
| Equalize Charging Voltage | Sealed:14.6V/ Gel: No/ Flooded 14.8V | | |
| Float Charging Voltage | Sealed/Gel/Flooded:13.8V | | |
| Low Voltage Reconnect | Sealed/Gel/Flooded:12.6V | | |
| Low Voltage Disconnect | Sealed/Gel/Flooded:11.1V | | |
| Self-consumption | ≤9.2mA/12V;≤11.7mA/24V | | |
| Temperature compensation coefficient | -3mV/°C/2V (25°C) | | |
| Charge circuit voltage drop | ≤0.29V | | |
| Discharge circuit voltage drop | ≤0.16V | | |
| LCD temperature range | -20°C+70°C | | |
| Working environment temperature | -25°C+55°C (Product can work continuously at full load) | | |
| Relative humidity | ≤95%, N.C. | | |
| Enclosure | IP30 | | |
| Grounding | Common Positive | | |
| USB output | 5VDC/2.4A(Total) | | |
| Overall dimension | 160 x 95 x 50mm | 194 x 118.4 x 63.8mm | 214 x 128.7 x 72.2mm |
| Mounting dimension | 148x70mm | 185x90mm | 205x100mm |
| Mounting hole size | Ø4.5mm | Ø5mm | Ø5mm |
| Terminals | 10mm ² /8AWG | 16mm ² /6AWG | 25mm ² /4AWG |
| Net weight | 0.35kg | 0.76kg | 1.02kg |

Above the parameters are in 12V system at 25°C, twice in 24V system

NOTES

WARRANTY STATEMENT

APPLICABLE ONLY TO PRODUCT SOLD IN AUSTRALIA

Brown & Watson International Pty Ltd of 1500 Ferntree Gully Road, Knoxfield, Vic., telephone (03) 9730 6000, fax (03) 9730 6050, warrants that all products described in its current catalogue (save and except for all bulbs and lenses whether made of glass or some other substance) will under normal use and service be free of failures in material and workmanship for a period of one (1) year (unless this period has been extended as indicated elsewhere) from the date of the original purchase by the consumer as marked on the invoice. This warranty does not cover ordinary wear and tear, abuse, alteration of products or damage caused by the consumer.

To make a warranty claim the consumer must deliver the product at their cost to the original place of purchase or to any other place which may be nominated by either BWI or the retailer from where the product was bought in order that a warranty assessment may be performed. The consumer must also deliver the original invoice evidencing the date and place of purchase together with an explanation in writing as to the nature of the claim.

In the event that the claim is determined to be for a minor failure of the product then BWI reserves the right to repair or replace it at its discretion. In the event that a major failure is determined the consumer will be entitled to a replacement or a refund as well as compensation for any other reasonably foreseeable loss or damage.

This warranty is in addition to any other rights or remedies that the consumer may have under State or Federal legislation.

IMPORTANT NOTE

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by

AUSTRALIA

Brown & Watson International Pty Ltd

Knoxfield, Victoria 3180

Telephone (03) 9730 6000

Facsimile (03) 9730 6050

National Toll Free 1800 113 443

NEW ZEALAND

Narva New Zealand Ltd

22–24 Olive Road

PO Box 12556 Penrose

Auckland, New Zealand

Telephone (09) 525 4575

Facsimile (09) 579 1192